

Adding or replacing hose to the MVRL Reel

When adding hose to the MVRL, DO NOT start loading with the reel in this position – the opening with the clamp on the upper side.

The hose will rub against the edge of the opening, eventually wearing a hole in the hose.




1 Connect the hose



Remove the clamp and nut. Attach the hose to the opening which is opposite of the clamp side. Use a wrench to make sure it is secure.



Spin the reel 180°, so clamp is now at the top

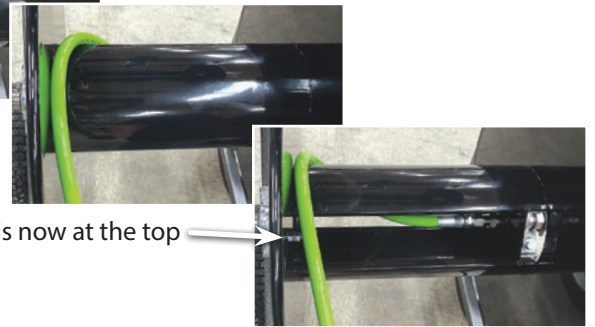

2 Attach the clamp



Position the clamp over the hose (with the flatter side next to the reel) and slide it on to the bolt. Finger tighten the nut.

3 Finish winding the hose



Continue winding the hose. Overlap the first loop, then stack in even rows as you wind the entire length.

101322



(800) 328-8170
M-F | 7a to 5p CST

MyTana.com

EMAIL mytana@mytana.com

▶ youtube.com/videoMyTana

2022 MYTANA LLC 746 SELBY AVE • ST. PAUL, MN 55104